




QVIS® | BK-2000W WALL MOUNT BRACKET


KEY FEATURES

- HEAVY DUTY
- GANG BOX BUILT-IN DESIGN
- EASY INSTALLATION FOR DOME CAMERAS


ACCESSORIES

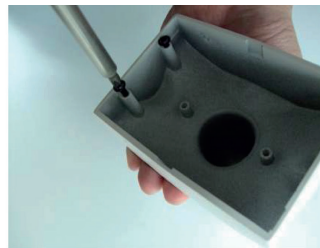

1. Fix 2pcs of M4xL10 black screws on bracket inside.

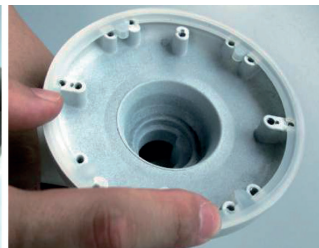

2. Put silicon O-ring(M) on cap grith.

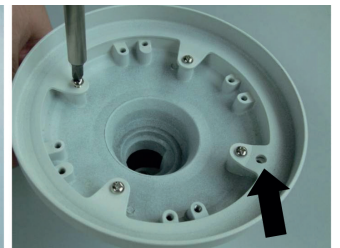

3. Fix adapter ring on cap body with 4pcs of M4xL6 screws. Pay attention to hole position.




4. Put silicon O-ring(L) on adapter ring grith.




5. Put silicon O-ring(S) on top of cap body.




6. Screw up cap body into bracket.

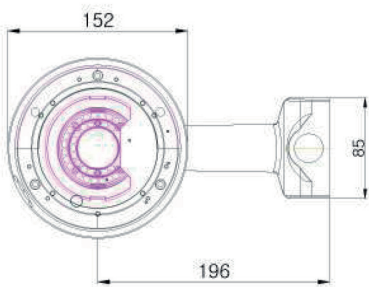


7. Set dome camera body onto cap body with 3pcs of M4xL18 screws.

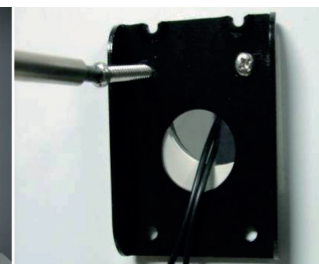

8. Fix the plate onto wall with 4pcs of ST6xL40 screws.

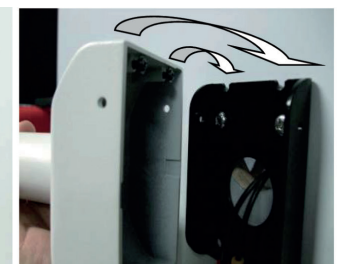

9. Hook 2 screws inside bracket onto the hanger of plate.

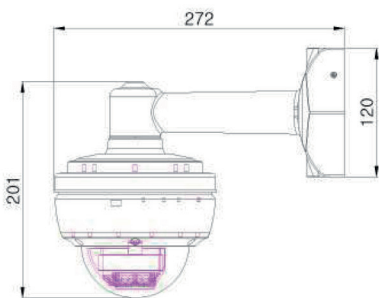

10. Secure bracket onto plate with 2pcs of M4xL10 screws.

DOME CAMERA MOUNT HOLE POSITION

